



CARE & CLEANING GUIDE FOR GLASS SINKS

Thank You for Choosing an Eden Bath™ Glass Sink

To help you stay as happy with your Eden Bath™ sink as the day it was installed, please follow the care and cleaning instructions provided in this document. If you have other questions, please feel free to contact our Customer Service department at 1.877.578.5584 or sales@edenbath.com. For more information about your Eden Bath™ sink, please visit our website at www.EdenBath.com.

GENERAL

For the best cleaning & care results when maintaining your Eden Bath™ glass vessel sink, please follow all instructions carefully and only use the suggested cleaning products and supplies. Using other cleaning agents may cause discoloration or damage to your sink and could potentially affect the beauty and functionality of your sink.

Always test all cleaning products and supplies on an inconspicuous area of your Eden Bath™ sink before applying to the entire surface.

Wipe all surfaces clean and rinse them completely with water immediately after applying a cleaning product. Rinse and dry any excess cleaner that may land on adjacent areas. Do not allow cleaning product to sit on the sink, as it may soak in and cause damage.

Use a soft, damp cloth or sponge. **DO NOT** use an abrasive material like a scouring pad, brush, or steel wool, to clean the surface of your Eden Bath™ sink.

The effectiveness of all cleaners depends on factors like water hardness and temperature, consistency of cleaning product formulas, and age/condition of the product being cleaned. Variations in these, and other, factors mean that Eden Bath™ cannot guarantee the effectiveness of any cleaner or procedure used. Please see our product warranty for further information on what is covered under normal conditions of use at <http://www.EdenBath.com/TermsPolicies.asp>.



CARE & CLEANING GUIDE FOR GLASS SINKS

GLASS VESSEL SINKS

To prevent water spots and clouding, rinse and wipe the inside of your glass sink with a microfiber cleaning cloth after each use.

Clear Frosted Glass Sinks: For a more thorough cleaning, use water and a mild (ammonia-free) liquid soap detergent. Apply the cleaner to the sink's interior only with a soft sponge. Rinse with lukewarm water and pat dry with a microfiber cleaning cloth. To keep the exterior of the sink spot-free, simply wipe off excess water with a microfiber cleaning cloth after each use. For a more thorough cleaning of the exterior, use a mixture of a mild (ammonia-free) liquid soap detergent and water.

Multi-Color Glass Sinks: For a more thorough cleaning, use water and a mild (ammonia-free) liquid soap detergent. Apply the cleaner to the sink's interior only with a soft sponge. Rinse with lukewarm water and pat dry with a microfiber cleaning cloth. To keep the exterior of the sink spot-free, simply wipe off excess water with a microfiber cleaning cloth after each use.

For hard water deposits or lime scale on the bowl's interior, consider one of the following cleaners: Cinch Streak Free Multi-Surface Cleaner, Mr. Clean Antibacterial Multi-Surface Spray, or Formula 409 Glass & Surface Cleaner. Apply the cleaner to the inside of the sink and immediately rinse with warm water and pat dry with a soft cloth. To prevent streaks, use a microfiber cleaning cloth to dry the sink.

Do not use cleaners containing any abrasive powders, bleach, ammonia, alcohol, or chlorine. These products may damage the sink surface.

Do not use any abrasive pads.