Brand Lavatory Faucets

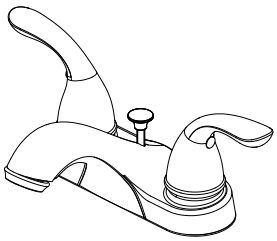

Model Number: 120461LF & 120463LF & 120464LF

INSTALLATION

Tools:

Adjustable wrench

Thread sealant tape

Pipe wrench

Groove joint pliers

Basin wrench

Screwdriver

Plumber's putty

Cleaning:

To maintain and protect the fine luster of all products, clean with a soft, damp cloth only. DO NOT USE detergents or cleansers as they may harm the protective finish.

INSTALLATION STEPS: Two handle lavatory faucet

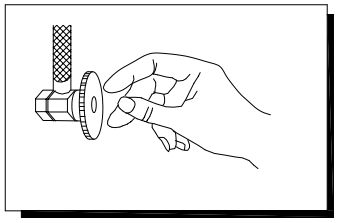

1. Shut off water supply at angle stop. Remove old faucet. Clean sink surface in preparation for new faucet.

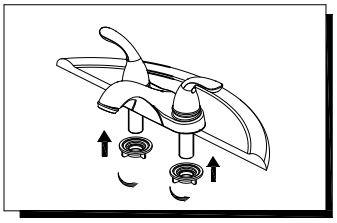

2. Place new faucet through holes in top of sink. From underside, threaded mounting nut.

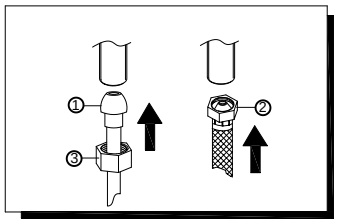

3. Making the waterline connections: Use 1/2 in. I.P.S. faucet connections (2, not included), or use the coupling nuts (3, not included) with a 3/8 in. O.D. ball-nose riser (1, not included). Use wrenches when tightening. Do not overtighten.

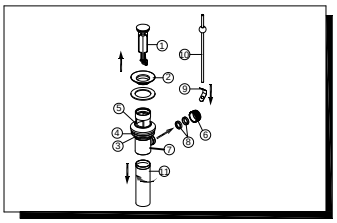

4. Remove the stopper (1) and the flange (2). Screw the brass nut (3) all the way down. Push the plastic washer (4) and the gasket (5) down. Unscrew the pivot nut (6) from the pop-up body (7) and remove the seal washers (8). Take off the spring clip (9) from the horizontal rod (10). Remove the tailpiece (11) from the pop-up body (7).

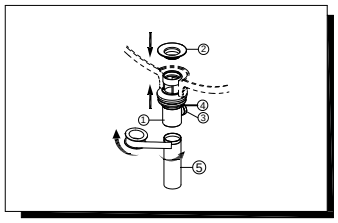

5. Apply the silicone to the underside of the flange (2). Insert the pop-up body (1) into the drain hole from below sink. Screw the flange (2) into the pop-up body (1). With the pivot hole (3) facing toward faucet, Use groove joint pliers to tighten the nut (4), do not over tighten. Do not turn the pop-up while tightening the nut, or sealant may not seal drain. Clean excess putty. Apply thread sealant tape to the top threads of the tailpiece (5) in a clockwise direction, as shown and hand tighten.

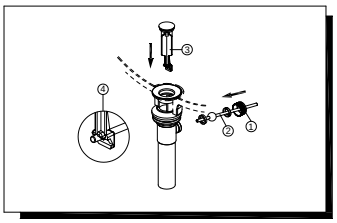

6. Install the horizontal rod (2) and the stopper (3) as shown (4). Hand tighten the pivot nut (1).

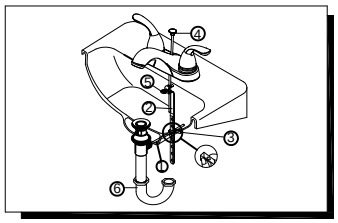

7. Attach horizontal rod (1) to strap (2) using clip (3). Insert lift rod (4) into strap and tighten screw (5). Connect assembly to drain (6).

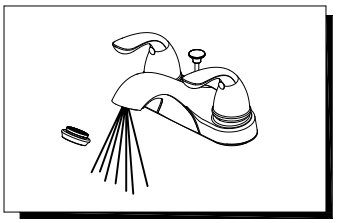

8. Important: After installation is completed, remove aerator. Turn on water supply and allow both hot and cold water to run for at least one minute each. While water is running, check for leaks. Replace aerator.

120461LF & 120463LF & 120464LF

Parts List

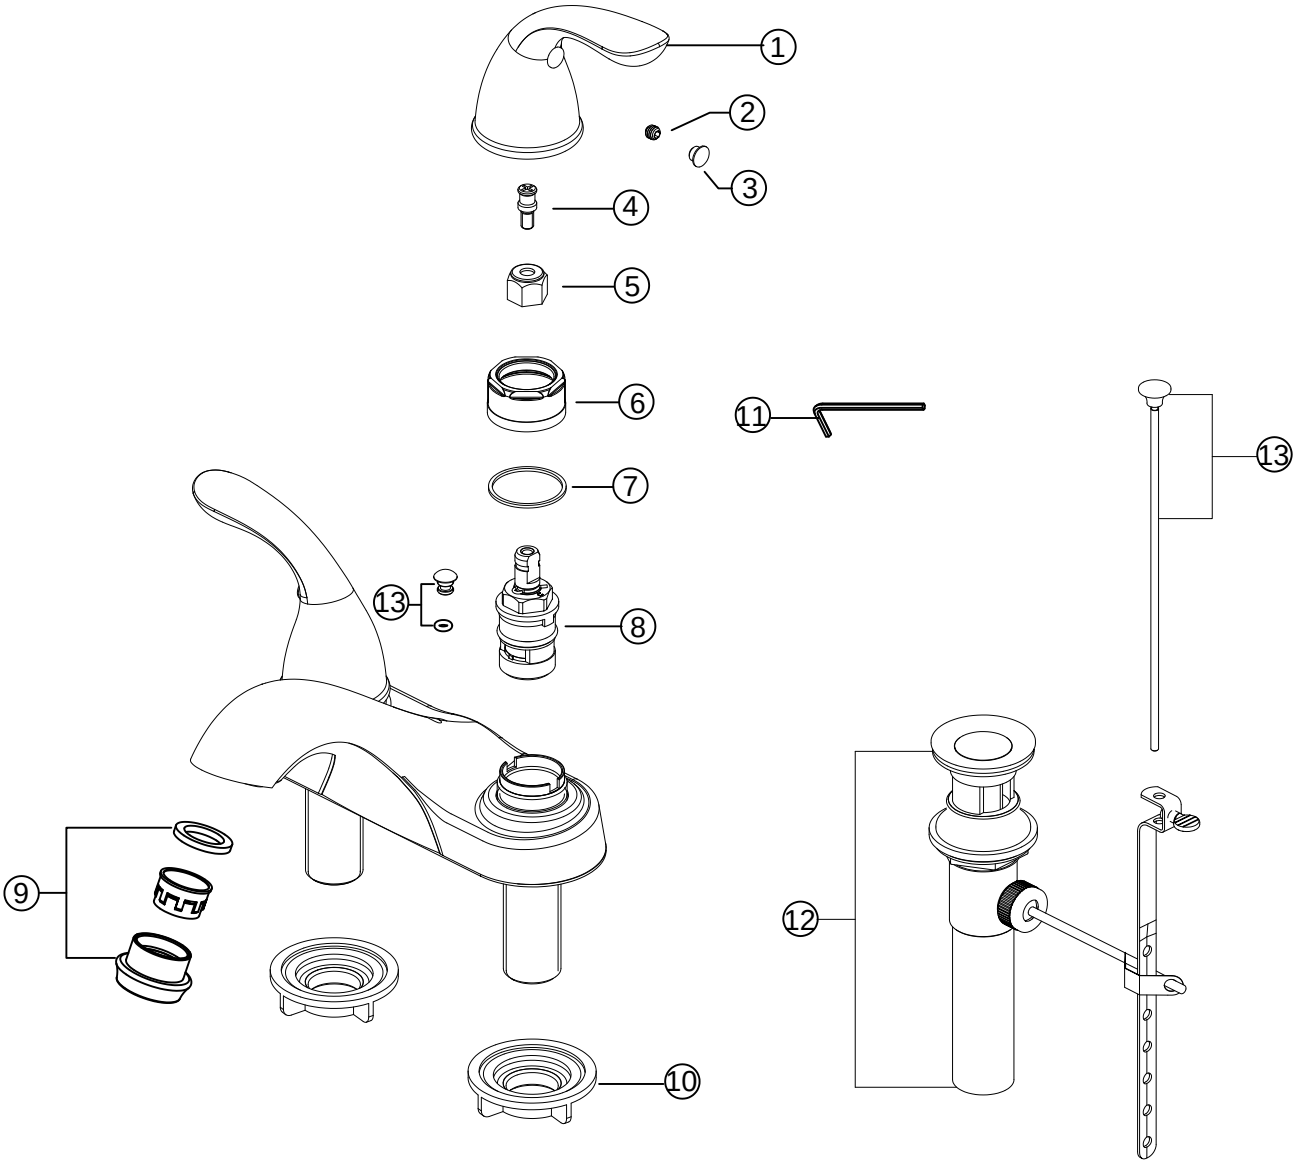

MODEL NO. 120461LF			
NO.	PART DESCRIPTION	PART NO.	QTY.
1	Handle Assembly	146	1
2	Handle Screw	20	1
3	Index Plug	147 & 148	1
4	Screw	149	1
5	Inverter	88	1
6	Bonnet Nut	173	1
7	Washer	174	1
8	Ceramic Cartridge	3 & 4	1
9	Aerator	175	1
10	Mounting Nut	46	1
11	Handle Wrench	994666	1
12	Cap	158	1

MODEL NO. 120463LF			
NO.	PART DESCRIPTION	PART NO.	QTY.
1	Handle Assembly	146	1
2	Handle Screw	20	1
3	Index Plug	147 & 148	1
4	Screw	149	1
5	Inverter	88	1
6	Bonnet Nut	173	1
7	Washer	174	1
8	Ceramic Cartridge	3 & 4	1
9	Aerator	175	1
10	Mounting Nut	46	1
11	Handle Wrench	994666	1
12	Brass Pop-Up	124020	1
13	Lift Rod & Lift Knob	994599	1

MODEL NO. 120464LF			
NO.	PART DESCRIPTION	PART NO.	QTY.
1	Handle Assembly	151	1
2	Handle Screw	20	1
3	Index Plug	147 & 148	1
4	Screw	149	1
5	Inverter	88	1
6	Bonnet Nut	173	1
7	Washer	174	1
8	Ceramic Cartridge	3 & 4	1
9	Aerator	176	1
10	Mounting Nut	46	1
11	Handle Wrench	994666	1
12	Brass Pop-Up	124011	1
13	Lift Rod & Lift Knob	994602	1