

All Eden Bath products are covered under a 1 year limited warranty against manufacturing defects.

The following installation guide and its associated photos are merely an informative example of how the faucet is installed and may not be an exact representation of the faucet you are installing. We recommend that installation should only be completed by a trained plumber. Eden Bath, its dealers, and affiliates take no responsibility for the information provided below and will not be liable for any misuse or damages caused by using this information.

Large Nut Type Installation



If your faucet includes the above mounting hardware, please follow the set of instructions to the right. This threaded pipe and nut may be attached to the bottom of your faucet already.




1. Ensure the water in your home is turned off. Attach both hot and cold steel braided water supply lines provided, to their respective threaded connectors at the bottom of the faucet. Hot: Left - Cold: Right.



2. Tighten both supply lines by hand, and then with a wrench or grips, but be careful not to over tighten or you may strip or crack the threaded connectors.



3. Attach the threaded pipe to the bottom of the faucet if it isn't already attached. Remove the large nut and matching rubber gasket. Insert the water supply lines and faucet into the mounting hole in your countertop.

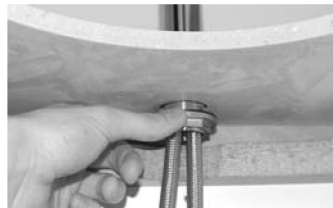

4. Attach the nut sized rubber gasket, then the large nut provided to the threaded pipe from underneath the countertop and tighten with a wrench or grips until the faucet is secured.



5. Apply plumbers tape / Teflon tape to the threaded connectors of your homes supply pipes. Attach the steel braided water supply lines from the faucet, to each of the hot and cold supply valves/ connectors and tighten.

Screw And Horseshoe Plate Type Installation



If your faucet includes the above mounting hardware, please follow the set of instructions to the right.



1. Ensure the water in your home is turned off. Attach both hot and cold steel braided water supply lines provided, to their respective threaded connectors at the bottom of the faucet. Hot: Left - Cold: Right.



2. Tighten both supply lines by hand, and then with a wrench or grips, but be careful not to over tighten or you may strip or crack the threaded connectors.



3. If a thin circular rubber ring was provided, place it between the faucet and the top of the countertop. Insert the water supply lines and faucet into the mounting hole in your countertop.



4. Place the horseshoe shaped rubber gasket and metal plate under the countertop with the supply lines coming through the open area. Attach provided screws through plate holes and into the faucet body and tighten.



5. Attach the nuts provided to the threaded screw shaft and hand tighten until flush with the metal plate. Then do a final tightening with a wrench or grips until the faucet is secure.



6. Apply plumbers tape / Teflon tape to the threaded connectors of your homes supply pipes. Attach the steel braided water supply lines from the faucet, to each of the hot and cold supply valves/ connectors and tighten.